


sales@rapind.com



www.rapind.com

Acrylic Desktop Screens

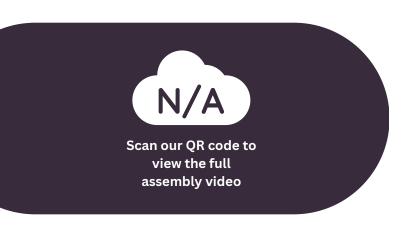

Step 1

Take the supplied clamp and tighten from underneath, until the clamp is securely positioned.

Step 2

Take your acrylic desktop screen and place in the top clamp located on the top section of the desk.

Step 3

Once the acrylic is in position with the clamp, tighten the fixing with the supplied allen key. This will lock the acrylic screen in place.

